


The 3-phase Hybrid

SH5.0RT / SH6.0RT / SH8.0RT / SH10RT


INSTALLATION & COMMISSIONING WITH BYD BATTERY

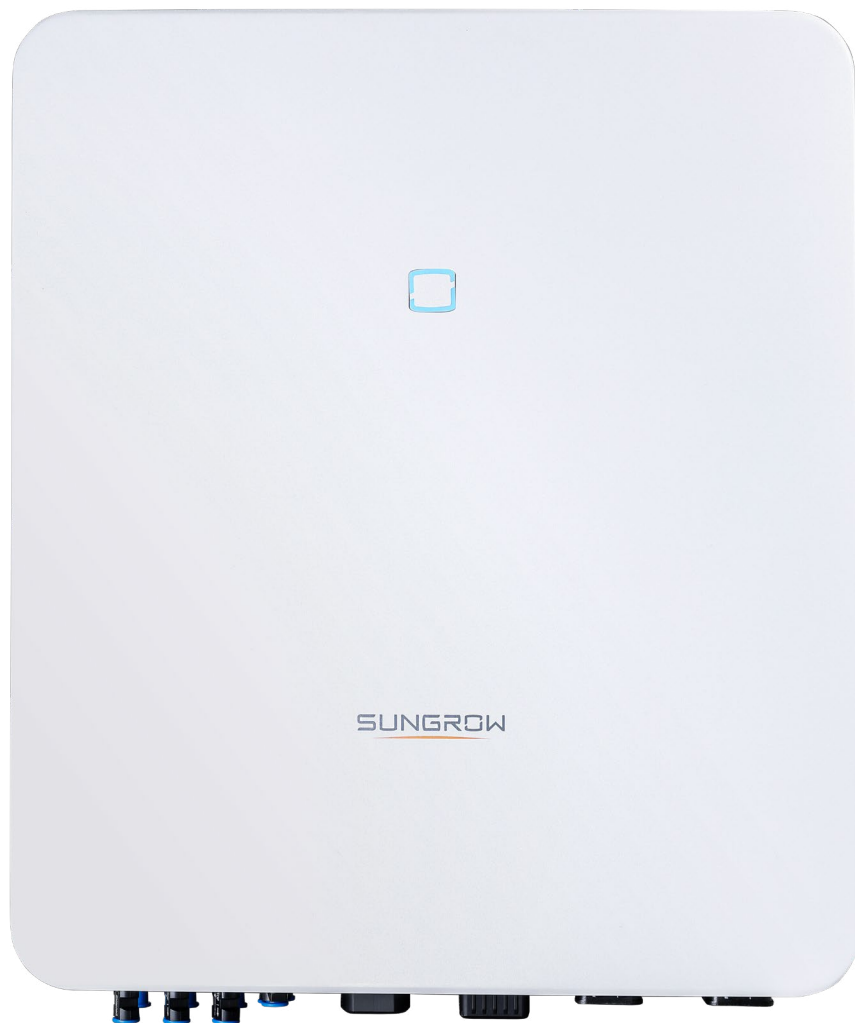




INSTALLATION & COMMISSIONING WITH BYD BATTERY


1 CONNECT POWER CABLES

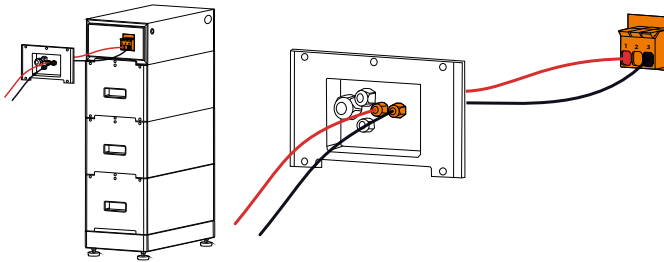


2 SECURE GROUNDING CONNECTION

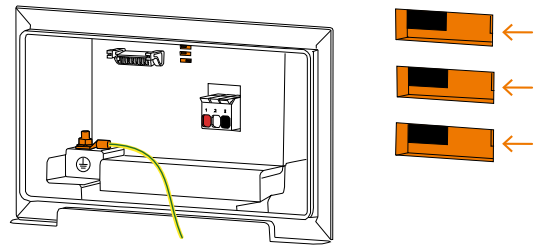


3 CHECK CABLE POLARITY

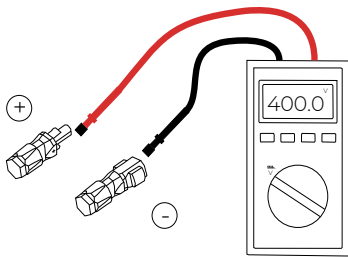


4 ASSEMBLE SUNCLIX CONNECTOR

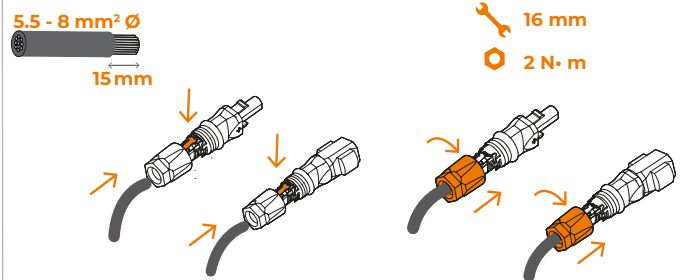


5 ATTACH COMMUNICATION CABLES

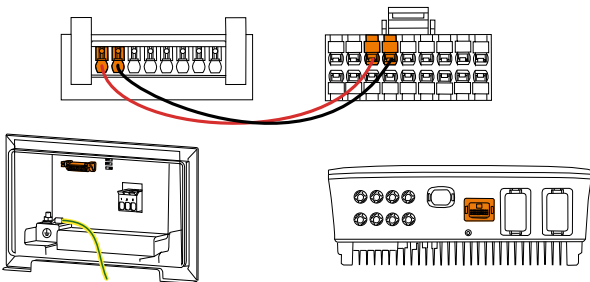

6 SWITCH ON BATTERY

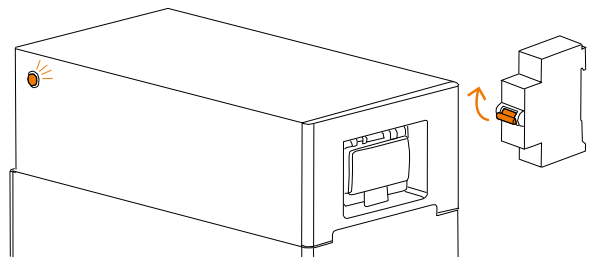

7 SET UP BYD Be Connect

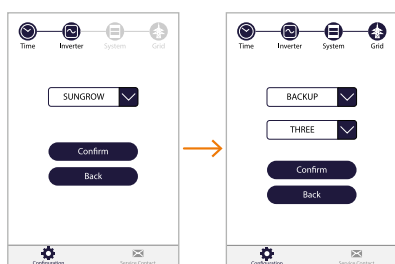

8 OPEN iSolarCloud

