Ta-ext-RS485-MB / Ta-ext-RS485-MT

Ambient Temperature Sensor with RS485 Interface





Short Description

Our ambient temperature sensors come equipped with a stable Aluminium housing and a robust weatherproof cable. Thanks to the use of top quality components the sensors achieve very high accuracy and are ideal for use in industrial and field environments (PV plant or monitoring of engineering room).

All sensors are shipped with a calibration protocol for the measuring amplifier.

If required, the sensors can be ordered with an inspection certificate 3.1 as per DIN EN 10204.

Furthermore the disturbance of the measurement accuracy can be reduced with the optional weather protection (Shield Tamb-Si).

Technical Data

Туре	Ta-ext-RS485-MB	Ta-ext-RS485-MT			
Interface	RS485				
Protocol	MODBUS	MT			
Measuring Range	-40 to +90°C				
Uncertainty (-40 to +90°C)	1 K				
Supply Voltage	24 VDC (10 to 28 VDC)				
Current	Typical 25 mA at 24 VDC				
Galvanic Isolation	1000 VDC between RS485 and Voltage Supply				
Sensor Element	Pt1000 1/3 Class B as per EN 60751				
Sensor Housing	INOX steel tube, 6 mm diameter, 50 mm length				
Sensor Cable	Length: 3 m, PUR coated, shielded (LiYC11Y, 4 x 0.14 mm²)				
Case Material	Powder Coated Aluminium				
Case Dimension / Protection Level	98 mm x 64 mm x 34 mm / IP 67				
Weight	approx. 530 g				
Operating Condition	Sensor Element -40 to $+90^{\circ}$ C / Case -40 to $+80^{\circ}$ C				
Sensor Cable	Length: 6 m, PUR coated, shielded (LiYC11Y, 4 x 0.14 mm²)				
Customs Number	90 25 19 00				



Ta-ext-RS485-MB / Ta-ext-RS485-MT

Ambient Temperature Sensor with RS485 Interface

Safety Instructions


The installation and assembly of electrical equipment must be carried out by electrically qualified persons. The sensor may not be used with equipment whose direct or indirect purpose is to prevent human death or injury, or whose operation poses a risk to humans, animals or property.

Electrical Connection

The sensors are designed for safety extra-low voltage (SELV) operation.

The cable shield shall be connected to the PE during installation.

WARNING: Connecting the supply voltage to the signal lines will damage the device.

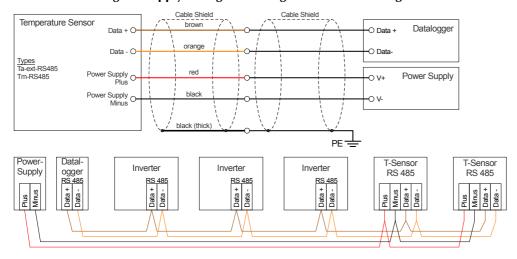

Maximum additional cable length for sensors with 6 m connection cable at voltage supply of 24 VDC / 12 VDC


Cable Cross Section								
0.14 mm ²	0.25 mm ²	0.34 mm^2	0.5 mm ²	0.75 mm^2	1.0 mm ²	1.5 mm ²		
300m / 50m	600m / 100m	800m / 150m	1000m / 200m	1000m / 300m	1000m / 400m	1000m / 650m		

Installation Instructions


If mounted outdoors, avoid direct exposure to sunlight and rain to the sensor housing (INOX steel tube). If necessary, provide protection from the sun and rain with the optional Shield Tamb-Si.

The through holes used to fix the sensor to a stable and suitable surface shall be accessible when the housing is opened. The tightening torque of the case cover is 180 Ncm.

The sensor cable fixed at the premounted cable grip.

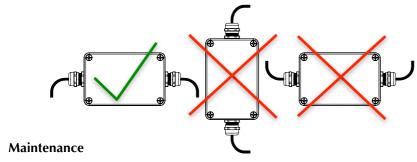

The sensors should be checked once a year for damage, contamination and correct fitting.

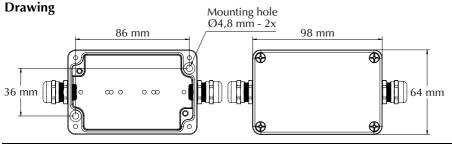



Optional weather protection **Shield Tamb-Si**

Page 2 of 2 Date: March 2020 Errors and changes excepted